HOME DECORATORS collection®

BF-24920 OXFORD WALL MT JE ARM W/MIRROR 60Hx20Wx4D″

INV#08292

ASSEMBLY INSTRUCTIONS

Made In China

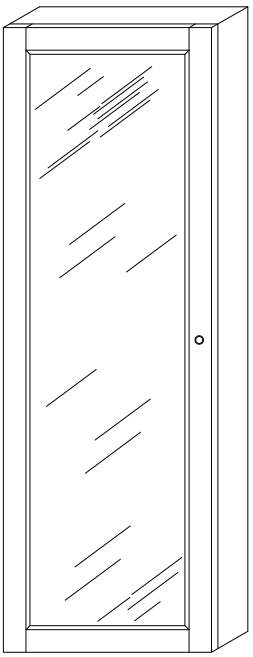

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  CABINET-1PC	B SCREWS-4PCS	C HANGERS-4PCS

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

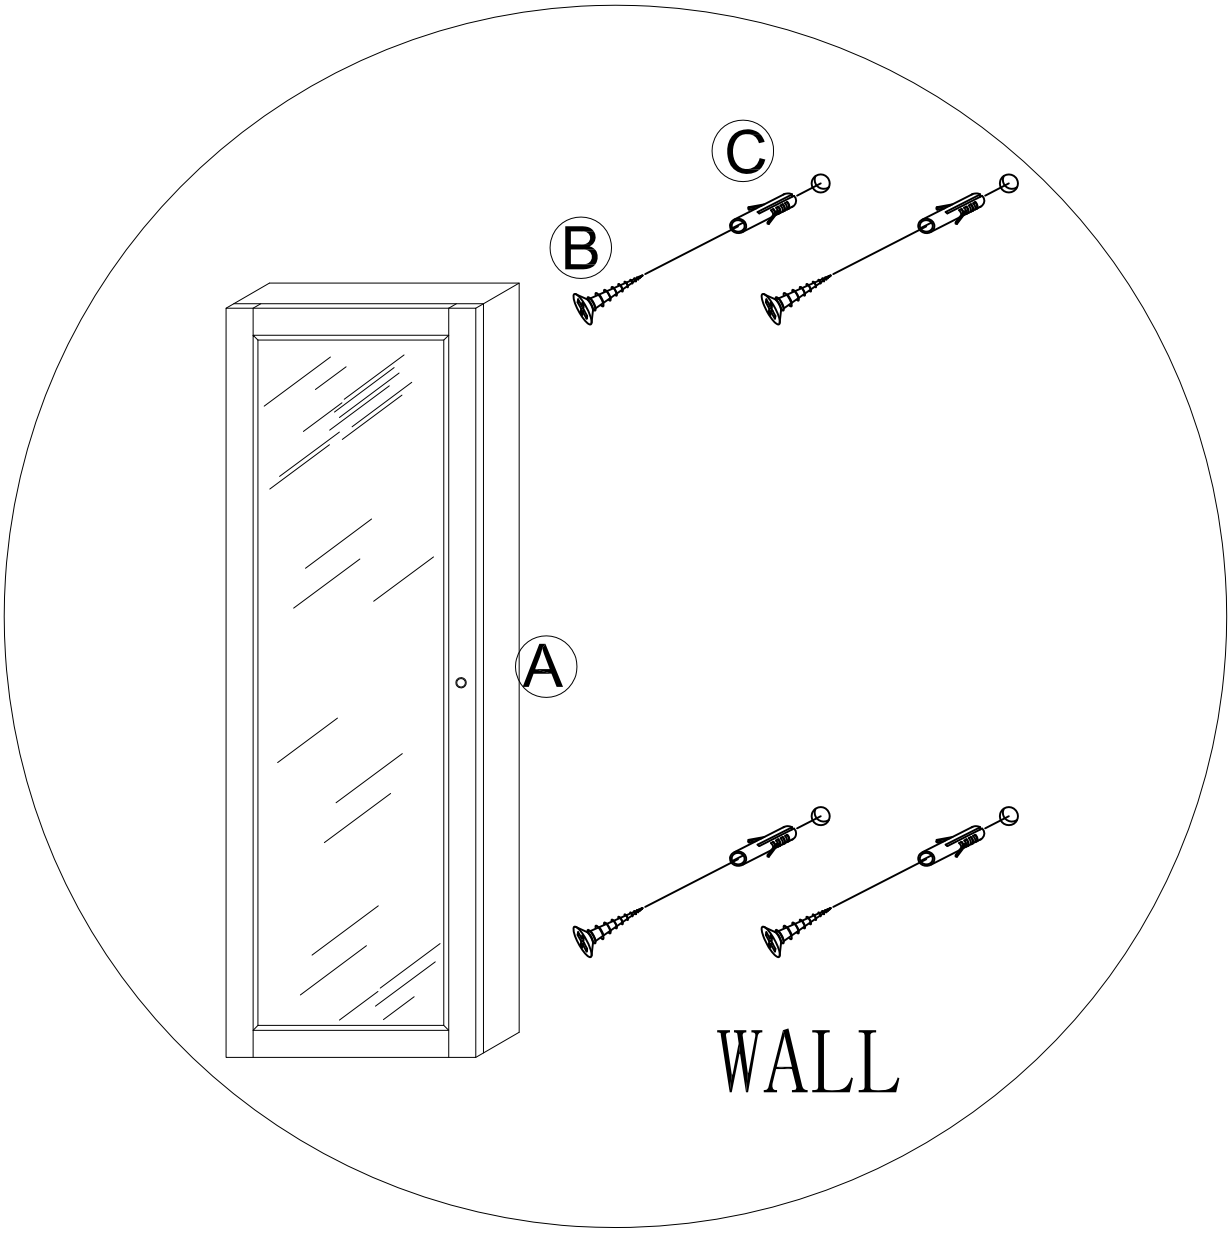

1). ASSEMBLE THE CABINET(A).

- PUT 4 HANGERS(C) INTO THE DESIRED LOCATION ON THE WALL. ROTATE 4 SCREWS(B) INTO THE HANGERS(C). HANG CABINET(A) ON SCREWS.